



411 West Congress St., Maple Lake, MN 55358 Toll Free 877-466-8837 www.wavearmor.net

## ASSEMBLY INSTRUCTIONS FOR 4 FT DOCK BENCH

### PARTS LIST:

ITEM	DESCRIPTION	QTY
1.	Bench Seat & Back	2
2.	Left hand arm	1
3.	Right hand arm	1
4.	3/8 hex bolt X 1.50 lg	12
5.	3/8 flat washer	12

### Assembly Instructions:

1. Put bench seat (item 1) into groove on right arm (item 3). Figure A
2. Align holes on arm (item 3) with inserts on seat (item 1). Figure A
3. Put flat washer (item 5) on hex bolt (item 4). Figure A
4. Screw hex bolt (item 4) with washer (item 5) through arm (item 3) bench (item 1) making sure to leave loose. (2 places) Figure A
5. Put bolt and washer through arm and into bench on bottom of assembly making sure to leave loose. (2 places) Figure B
6. Repeat steps 1 to 5 for left arm (item 2).

FIGURE A:

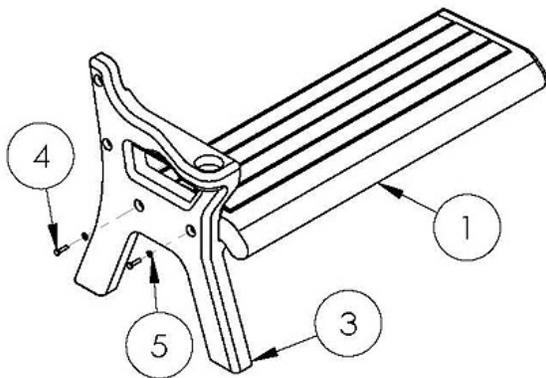


FIGURE B:

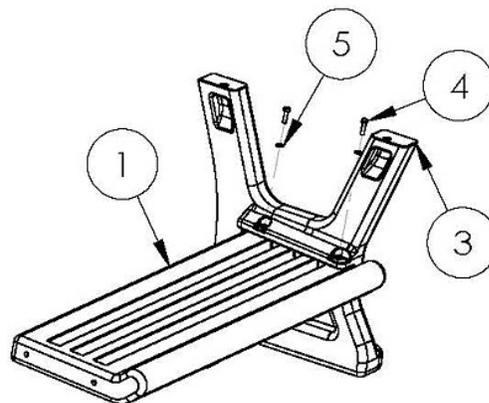


FIGURE C:

7. Put seat back (item 1) into groove on arms (item 2 and 3). Figure C
8. Align holes in arm and inserts in bench. Figure C
9. Put bolt (item 4) and washer (item 5) through holes in arm and screw into inserts on bench (4 places). Figure C
10. Once you have all 12 bolts in place loosely, then go back and tighten until snug.

