



PRODUCT ASSEMBLY INSTRUCTIONS:




www.wavearmor.net

Item # | Product Name: #301106 Heavy Duty Nylon Cleat

Parts List:	Tools Needed:
1. Nylon Cleat 8" (qty 2)	1. 5/16" or 8mm Allen wrench
2. Nylon plate (qty 2)	2. Ratchet
3 4" socket head bolt (qty 4)	3. 9/16" socket
4. 3/8" washer (qty 4)	4. short extension
5. 3/8" nylock nut (qty 4)	5.
6.	6.
7.	7.
8.	8.
9.	9.
10.	10.

Assembly Instructions:

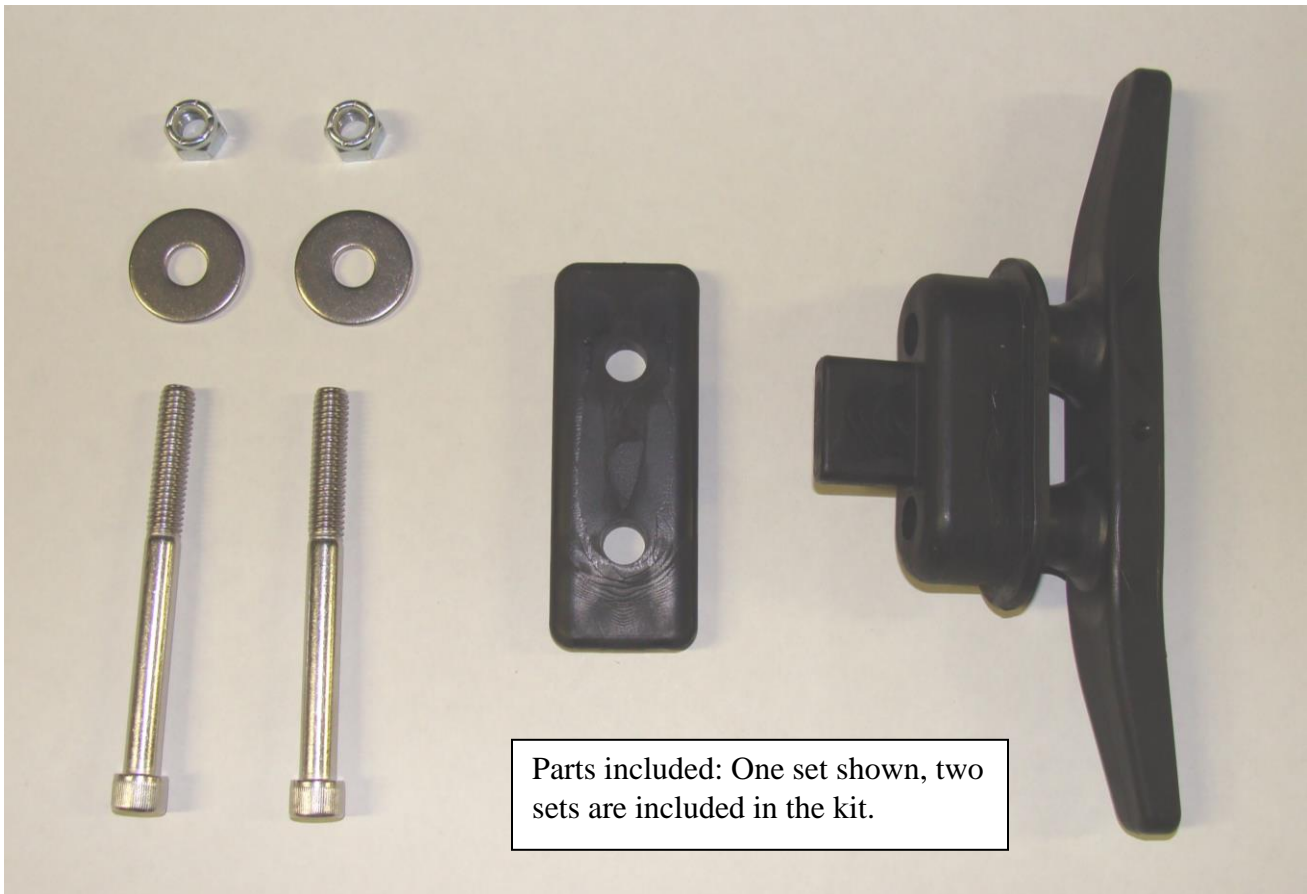

1. Align cleat with slot in dock section. Insert cleat into slot and install socket head bolts into the through holes in cleat.



2. Install nylon plate over the bolts sticking through into the channel on the dock section. Place washer and nylock nut onto the bolts and tighten securely. The cleat is now ready for use.

