



**PRODUCT ASSEMBLY INSTRUCTIONS:**



www.wavearmor.net

**Item # | Product Name:** #300097, 301012 & 300098, Post Attachment 2", 3" and 4" Pipe Sleeve Kit


Parts List:	Tools Needed:
1. 301104 Qty 1, 2" Sleeve, 301002 3" Sleeve or 301110 4" Sleeve	1. Ratchet and short extension
2. 300389 Qty 1, Post Attachment	2. 9/16" socket
3. 300252 Qty 1, Hardware bag Contains: 3/8 x 1 1/2" bolt, qty 1 3/8 x 1 1/4" bolt, qty 3 3/8 washer qty 4	3. Rubber Mallet or Hammer (Optional)
4.	4. Silicone spray (optional)
5.	5.

**Assembly Instructions:**

**Installing the post attachment and sleeve in the Wave Dock. The 2" sleeve is designed to fit 1 1/2" pipe which has an OD of 1 7/8". The 3" sleeve is designed to fit 3" pipe which has an OD of 3 1/2". The 4" sleeve is designed to fit 4" pipe which has an OD of 4 1/2".**

**Determine where the posts will be placed according to the dock layout. It is recommended to place a post about every 15ft and at any inside and outside corners of L-shapes.**

- Slide the post attachment into the channel on the side of the dock. Silicone spray may allow the post attachment to slide easier. It may be necessary to use a mallet or hammer to get it to slide. Align the threaded insert in the post attachment with the slot in the dock at the desired location. Secure with the 3/8 x 1 1/2" bolt and washer.

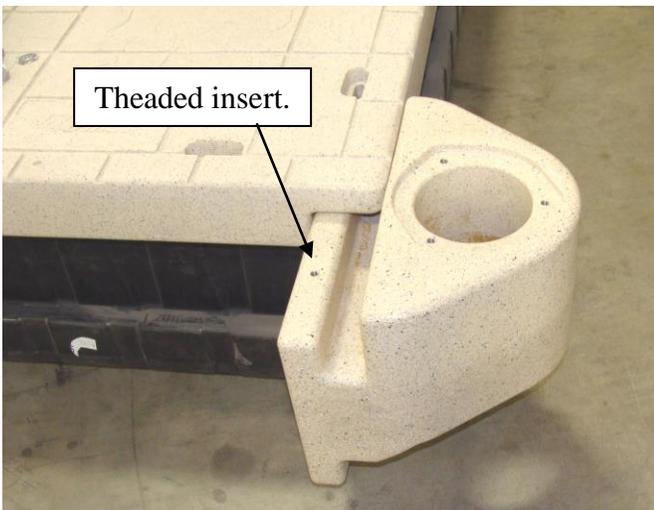

- Align sleeve with threaded inserts in the post attachment. Set into place with the sleeve down inside the post attachment and secure with the  $3/8 \times 1 \frac{1}{4}$ " bolts and washers.

