



PRODUCT ASSEMBLY INSTRUCTIONS:


wavearmor.com

Item # | Product Name: #302151 Pro Port 5 & 6 Cap Kit


Parts List:	Tools Needed:
1. Cap qty 2	1. Ratchet and 9/16" socket
2. Hardware Bag containing: 3/8 x 2" bolt qty 6, lock washer qty 6, heavy washer qty 6	2.
3.	3.
4.	4.
5.	5.
6.	6.

Assembly Instructions:

1. Insert cap into the port as shown below. Make sure the 3 bolt holes line up with the threaded inserts in the port. Insert the 3/8 x 2" bolts into the holes and thread into the inserts in the port. Tighten securely. Repeat on other side.

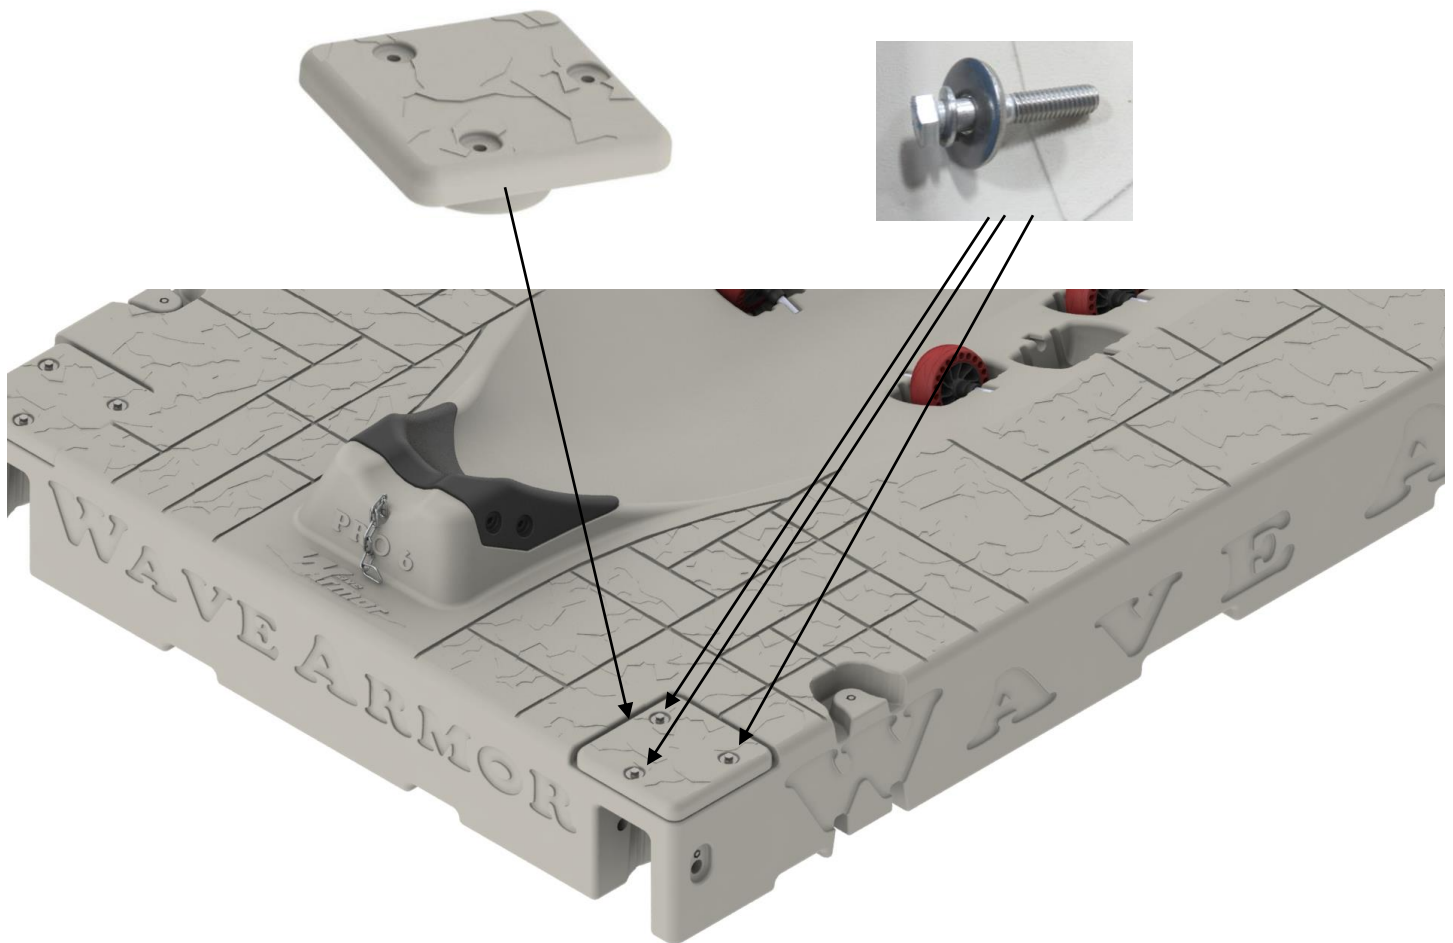

2. Caps may also be installed at the rear of the port. The procedure is the same.

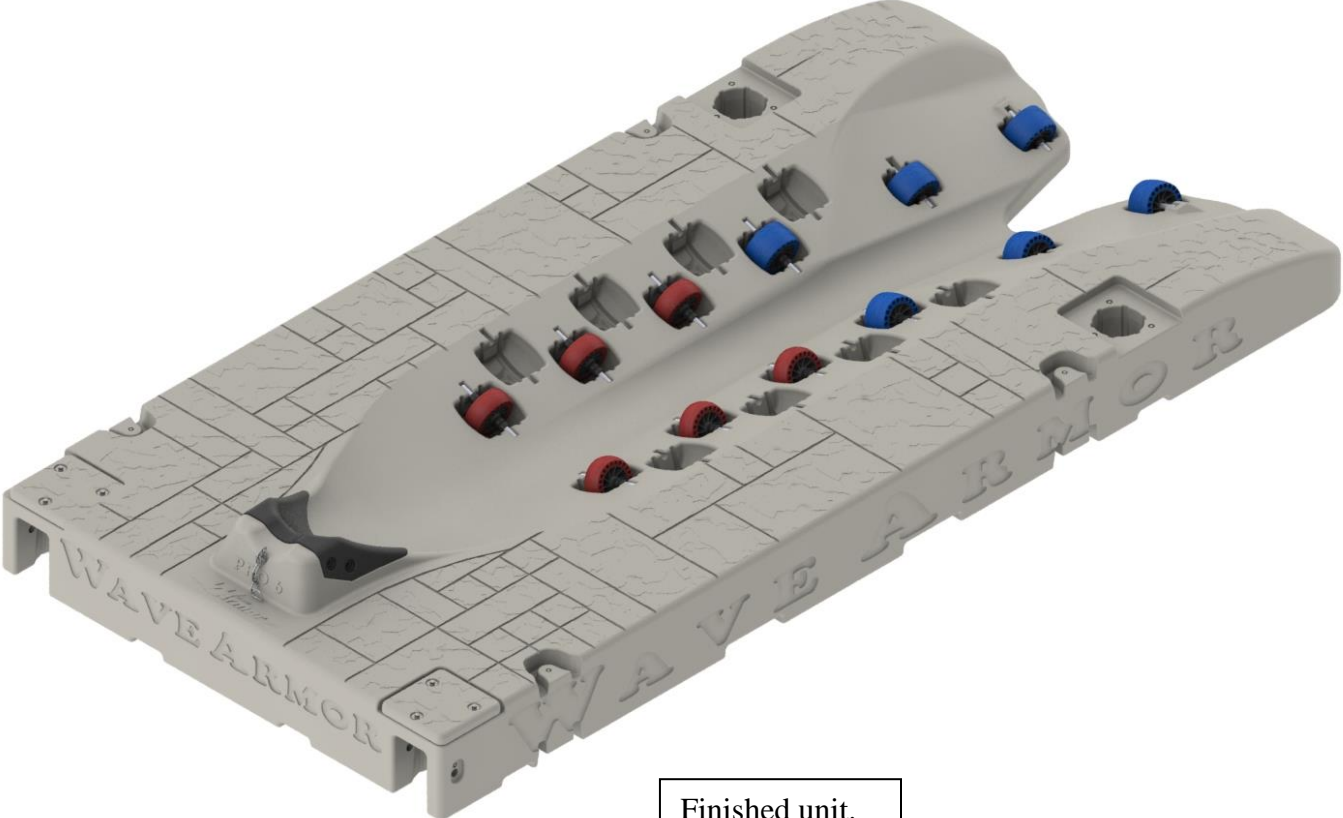

Finished unit.